 



**XM3BT
Multimedia Speaker
User manual**

Unpack the Box


Box contents

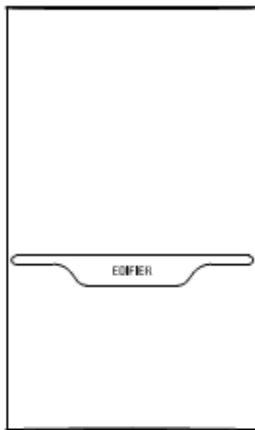

 Left satellite speaker

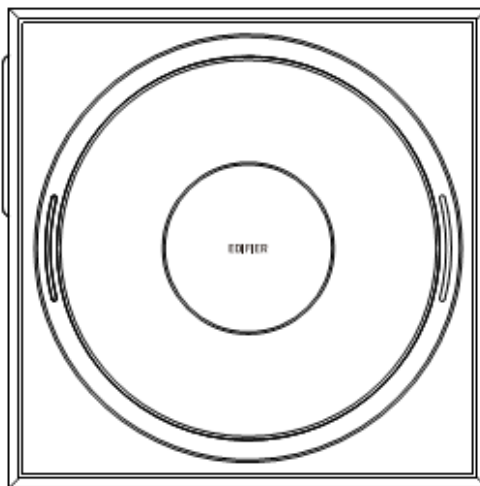

Subwoofer

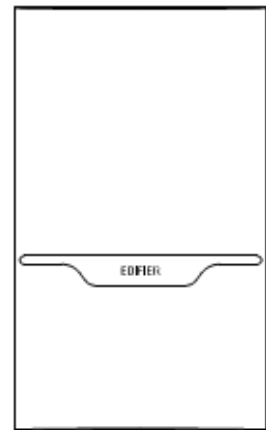 


Right satellite speaker




3.5mm-3.5mm audio cable



 User manual

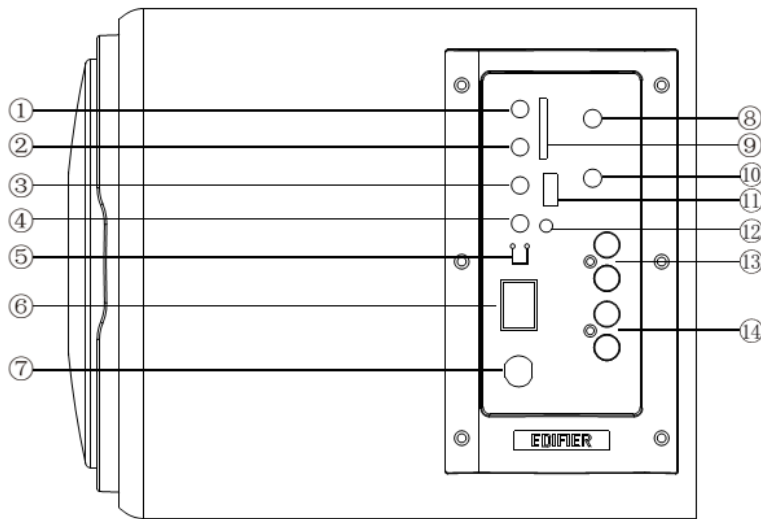


1. Press:
 - Bluetooth/USB/SD card mode: previous track
 - FM mode: quick adjustment to low frequencies
 - Press and hold:
 - USB/SD card mode: previous folder
2. Press: play/pause (Bluetooth/USB/SD card mode)
 - Press and hold: search for full frequencies (FM mode)
3. Press:
 - Bluetooth/USB/SD card mode: next track
 - FM mode: quick adjustment to high frequencies
 - Press and hold:
 - USB/SD card mode: next folder
4. Mode switch: AUX/Line in/Bluetooth/SD card/USB/FM
5. LED indicator
 - Green: AUX/Line in
 - Red: SD card/USB
 - Orange: FM
 - Blue: Bluetooth
6. Power switch
7. Power cable
8. Master volume control
9. SD card slot
10. Bass adjustment
11. USB connector
12. AUX input
13. Line in input
14. Output to satellite speakers

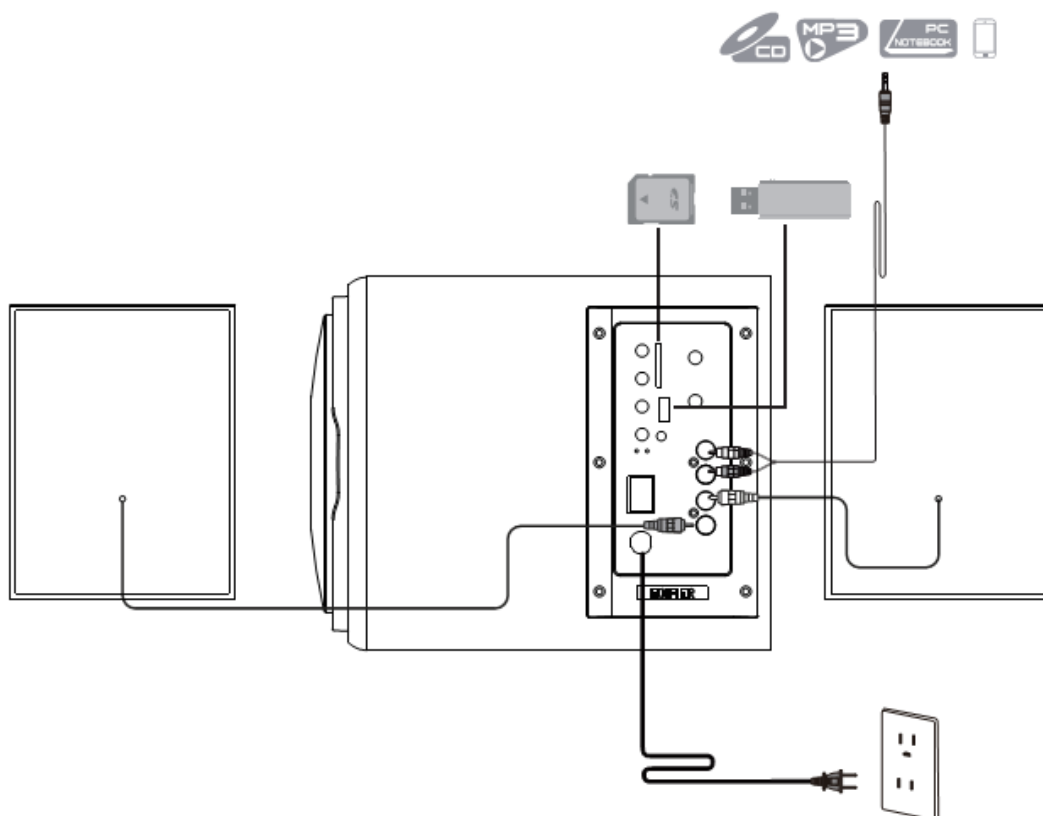 


1. Connect satellite speakers to subwoofer using connecting cables from the satellite speakers, please pay attention to color matching: red port is right sound channel and white port is left sound channel.
2. Connect subwoofer to power source using power cable from the subwoofer and turn on power switch, LED indicator will be lit and the speakers should be ready to go.
3. Connect to audio sources.

 1. Connect to audio source.

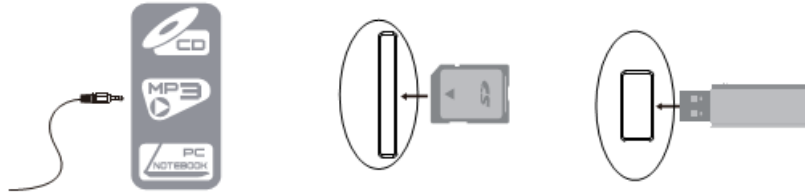



 

2. Select audio source.

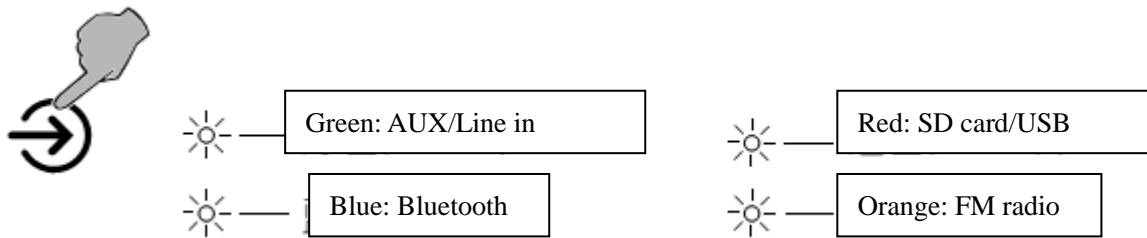

   3. Play music on the connected device and adjust the settings to a desired level.



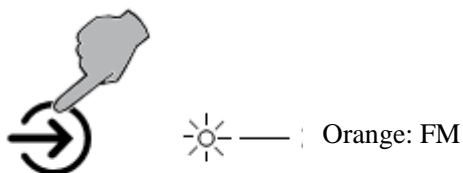


1. Press the “” button on the side panel of the subwoofer to select FM mode, LED indicator will turn orange.
2. Press and hold the “” button on the side panel of the subwoofer to start searching for and presetting radio stations, orange indicator will flash during searching and will be constantly lit after searching is complete.
3. Press the “/” button to adjust FM frequency.


Note:

- ① It can preset 70 radio stations during FM search.
- ② The default frequency range is 87.5MHz~108MHz.



 Bluetooth mode

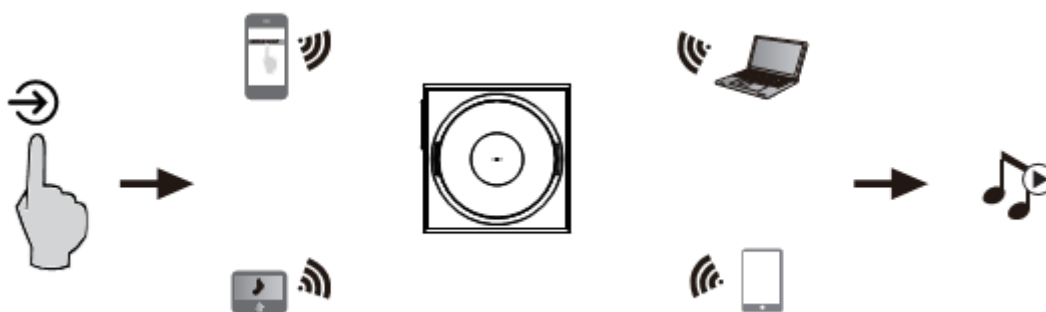

1. Press the “” button on the side panel of the subwoofer to select Bluetooth mode, LED indicator will turn blue.
2. Set your Bluetooth device to search for and connect to “EDIFIER XM3BT”.
3. Pin code for connection is “0000” if needed.
4. Play music on the connected device and adjust the settings to a desired level.

Note:

- * To enjoy all Bluetooth functions of this product, please ensure your audio source device has A2DP (Advanced Audio Distribution Profile) profile.
- * Bluetooth connectivity and compatibility may be different between different source devices, depending on the software versions of source devices.

Power output:	R/L: 8W+8W	SW: 18W
Frequency response:	R/L: Hz-KHz	SW: Hz-Hz
Mid-range and treble unit:	3 1/2 inch (88mm)	
Bass unit:	5 1/4 inch (148mm)	
Audio input:	AUX/Line in/Bluetooth/USB/SD card	